


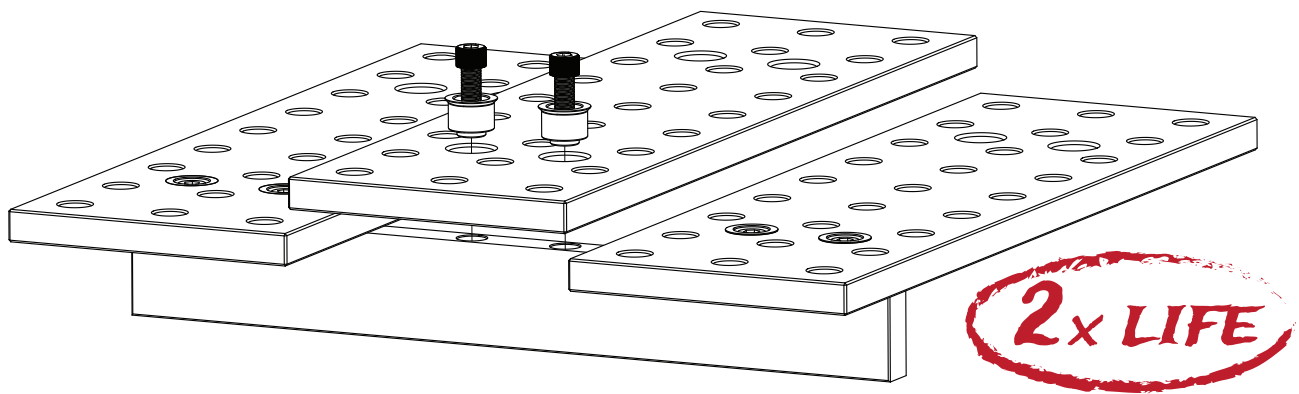

NEW REVERSIBLE Self-Locating Table Plates!

Get longer wear from your BuildPro® Table.
When the surface of your BuildPro® Table plates show signs of wear,
turn them over to provide a new work surface.



Your new reversible BuildPro® Table plates are self-locating.

How to reverse your plates:

Prep: Remove spatter around mounting hole area before reversing plates.

1. Remove all Flush Mount Socket Head Cap Screws from one table plate.
2. Remove all Locating Bushings.
3. Lift plate, turn over, and place over the counterbore, aligning with mounting holes.
4. Working from the two plate holes at one end of the plate, insert Locating Bushings. Repeat on other end of the plate.
5. Insert all remaining Locating Bushings.
6. Insert Socket Head Cap Screws, starting at the center of the plate. Tighten.
7. Insert all remaining Socket Head Cap Screws. Tighten.
8. Repeat this process for all table plates. Your new work surface is now ready for use!